


Multi-Zone Voice Evacuation System General Alarm Operation

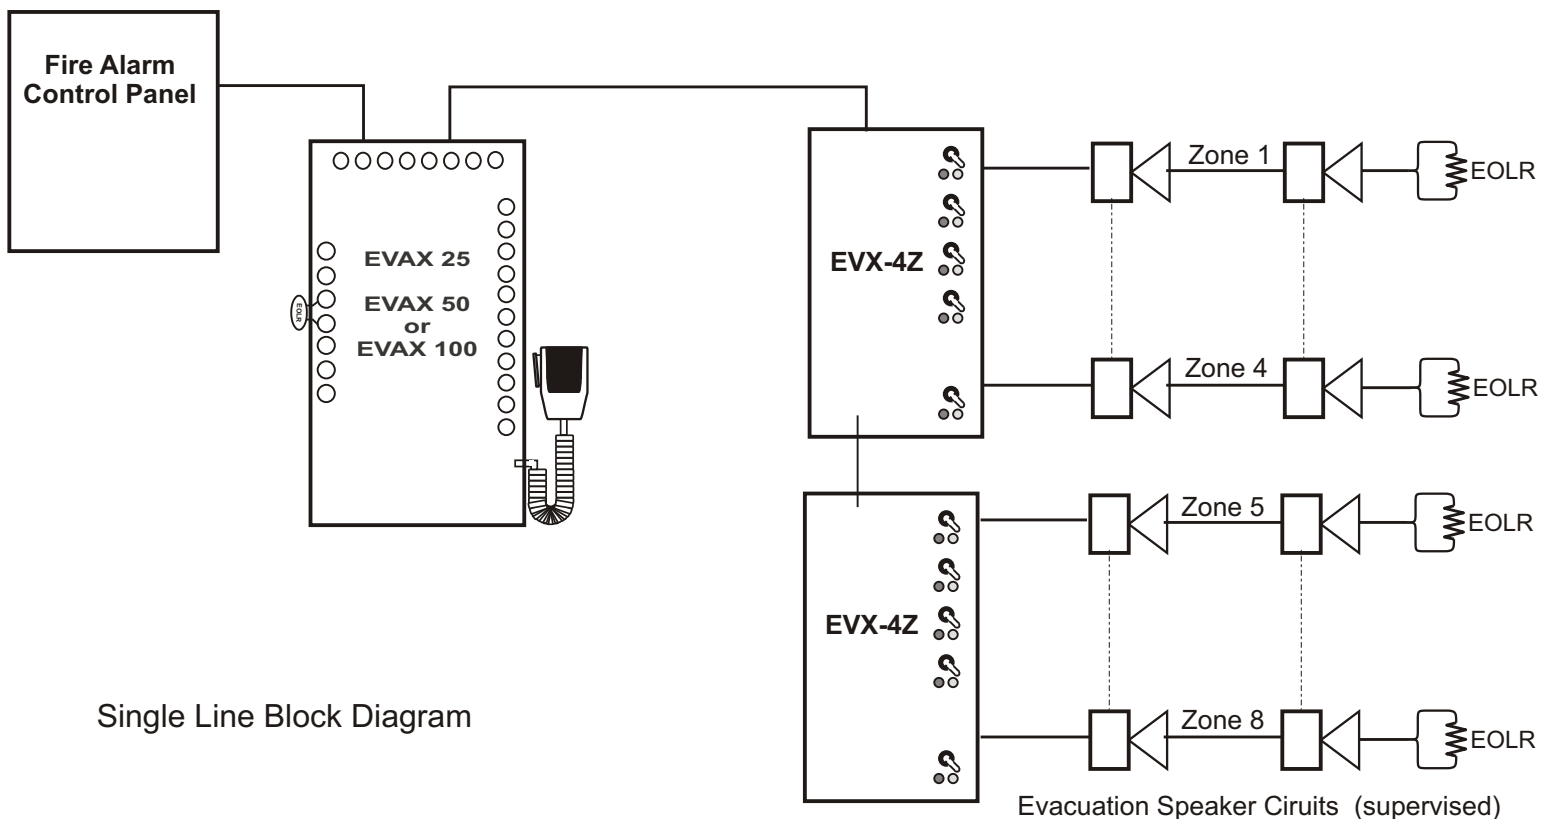

Notes:

- 1) Maximum Load for each Evacuation Speaker Circuit is 25 Watts (15W for an EVAX 25).
- 2) When Fire Alarm System goes into alarm, all Evacuation Speaker Circuits operate.
- 3) Manual Paging will override alarm message sequence.
- 4) While Alarm condition is active, paging is All-Call. Once FACP has been reset or silenced, operator may select individual zones.