


Multi-Zone Voice Evacuation System Floor Above / Floor Below Operation

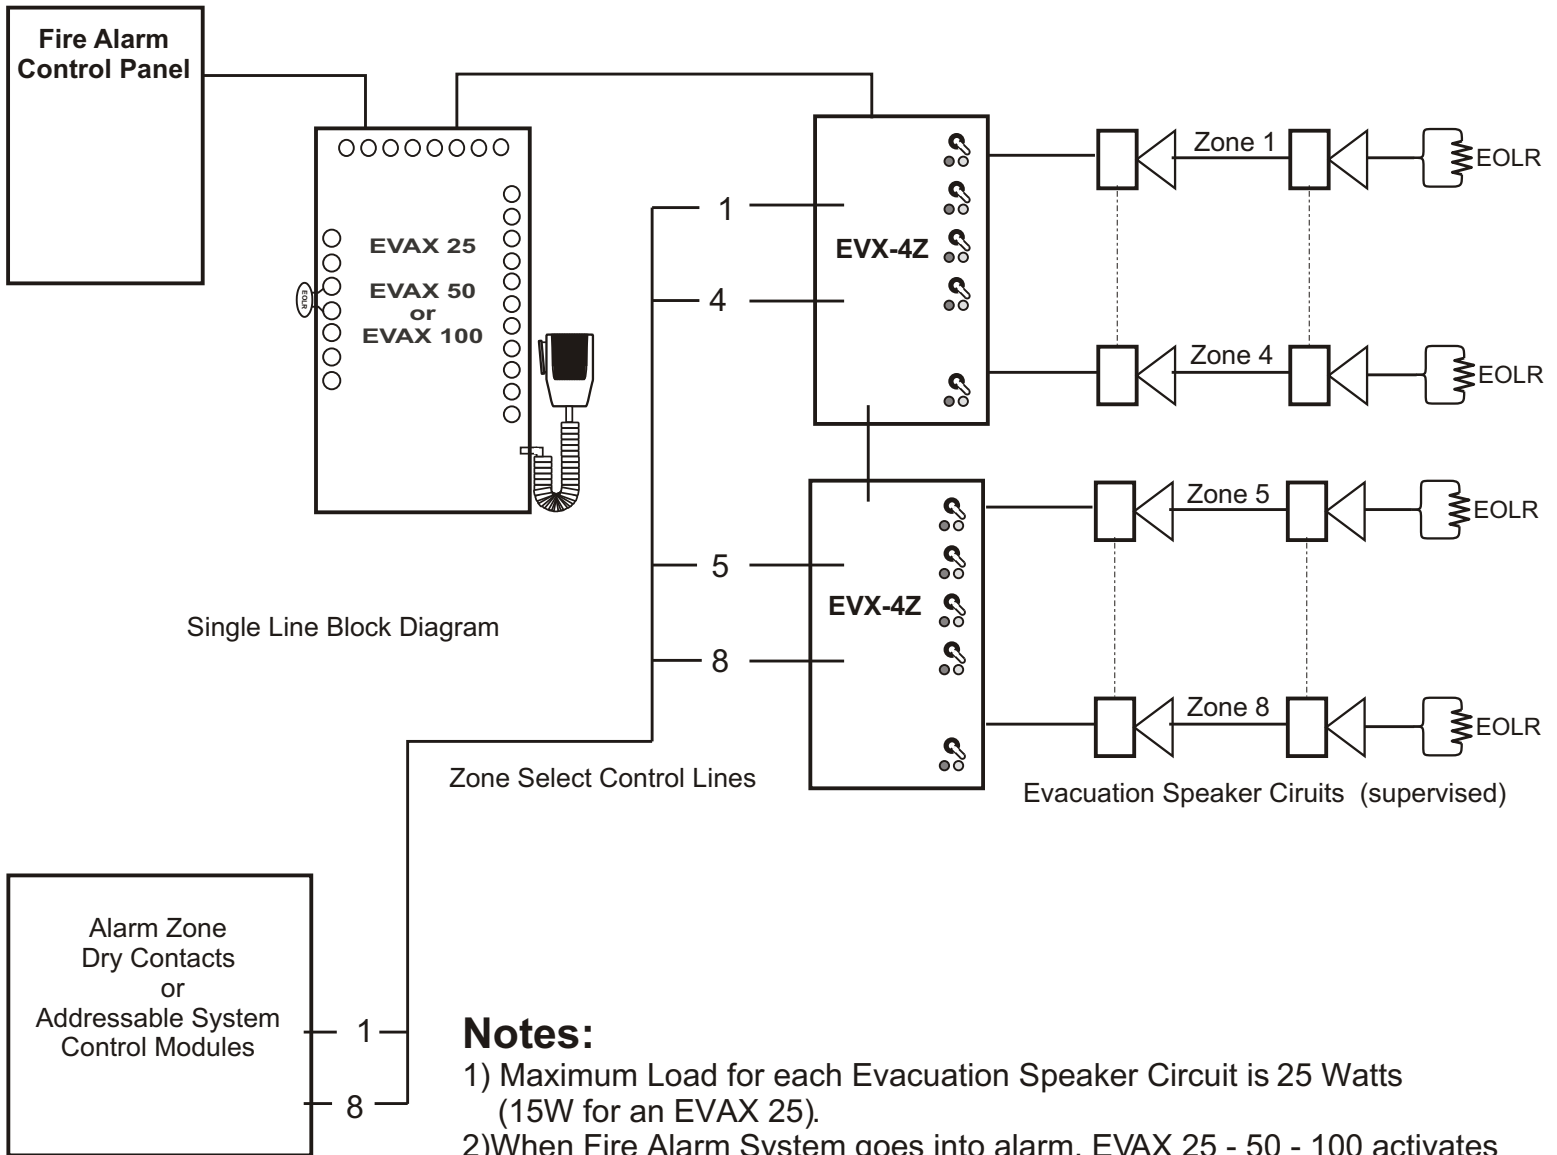

Notes:

- 1) Maximum Load for each Evacuation Speaker Circuit is 25 Watts (15W for an EVAX 25).
- 2) When Fire Alarm System goes into alarm, EVAX 25 - 50 - 100 activates and the evacuation message is broadcast only over the speaker circuits which are selected by the "Alarm Zone Dry Contacts" or "Addressable System Control Modules".
- 3) Manual Paging will override alarm message sequence.