


Churches and Synagogues

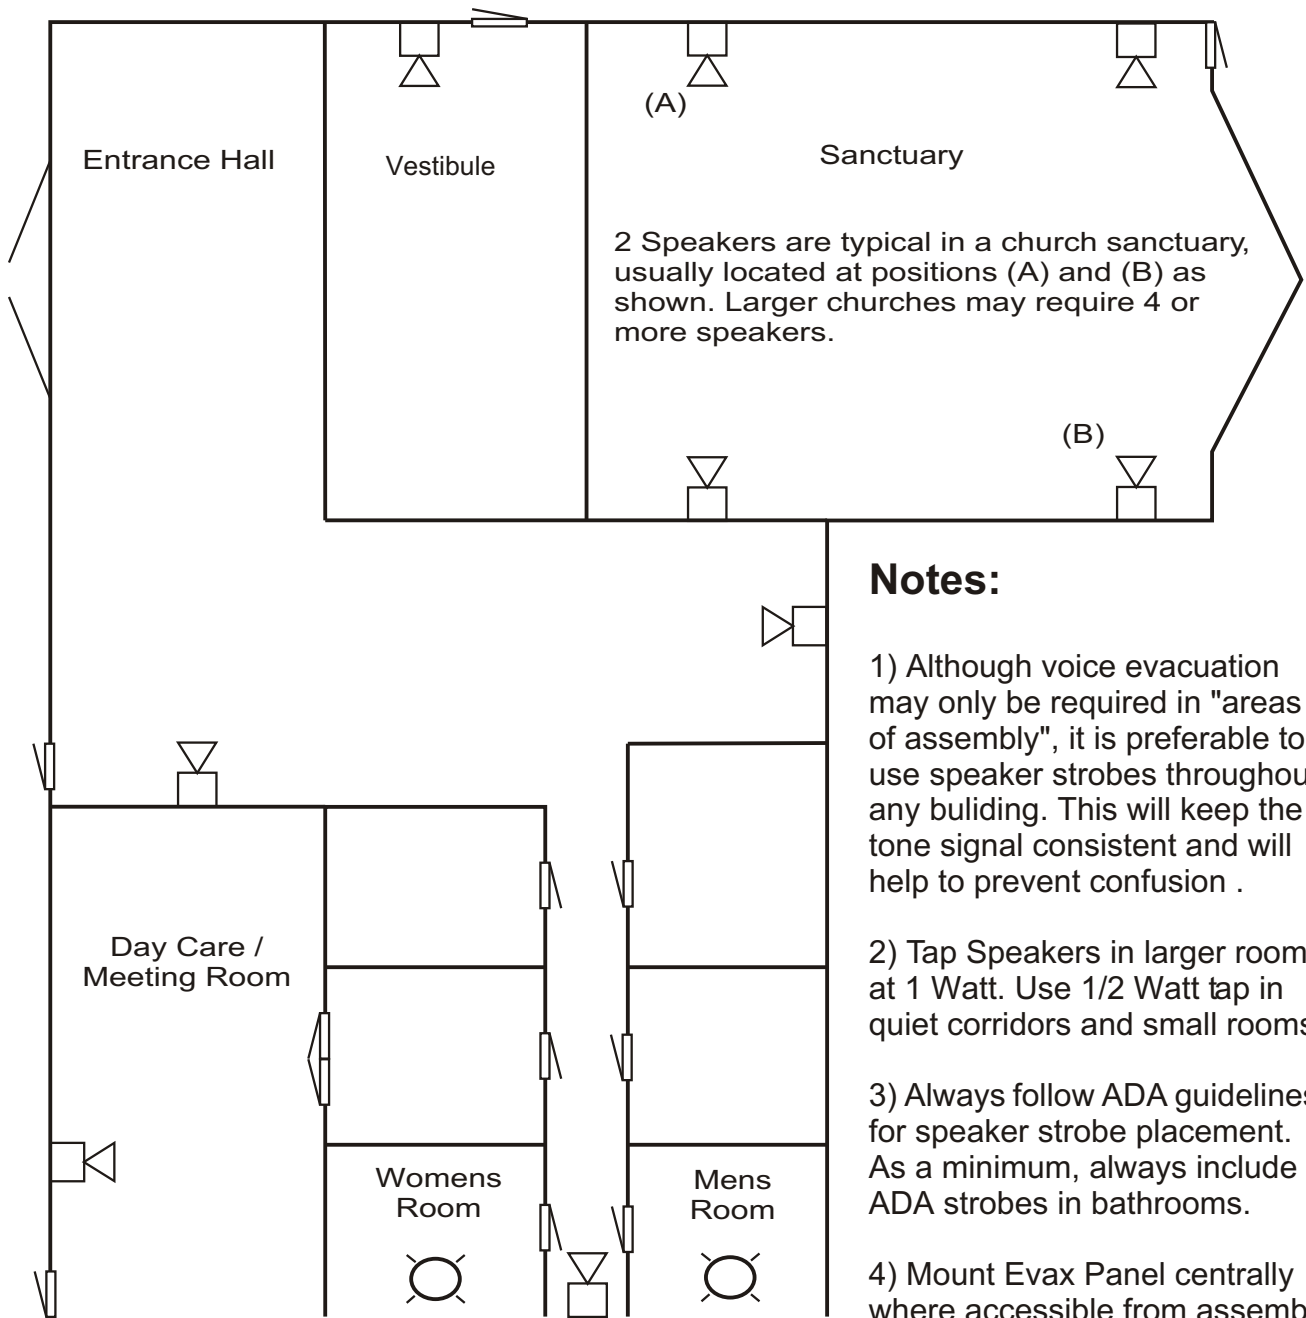

Notes:

- 1) Although voice evacuation may only be required in "areas of assembly", it is preferable to use speaker strobes throughout any building. This will keep the tone signal consistent and will help to prevent confusion .
- 2) Tap Speakers in larger rooms at 1 Watt. Use 1/2 Watt tap in quiet corridors and small rooms.
- 3) Always follow ADA guidelines for speaker strobe placement. As a minimum, always include ADA strobes in bathrooms.
- 4) Mount Evax Panel centrally where accessible from assembly areas.

Typical Church or Synagogue